


ASSEMBLY INSTRUCTIONS FOR TABLE CLAMP soni FIX CLAMP


TABLE CLAMP

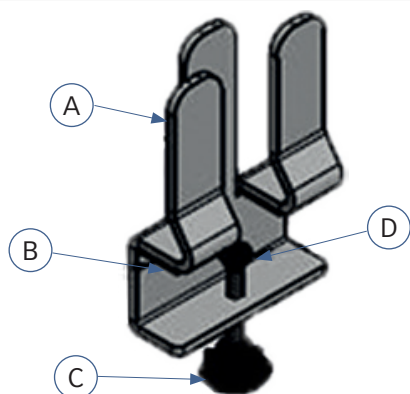

The package contains


- ▶ 1 x soni FIX CLAMP [A]
- ▶ 2 x foam pad [B]
- ▶ 1 x pressure screw [C]
- ▶ 1 x pressure piece [D]

1.

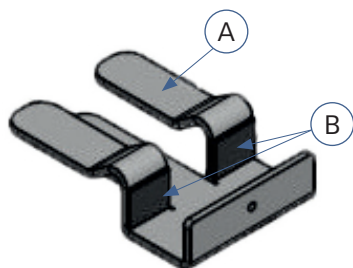


Apply the foam pads [B] to the parts of the soni FIX CLAMP [A] that will rest on the desk/table surface.

2.

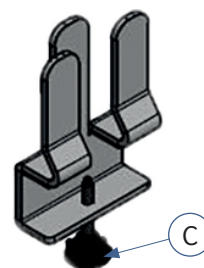


Insert the pressure screw [C] into the thread.

3.

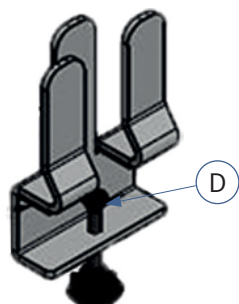

Push the pressure piece [D] onto the ball head of the pressure screw [C] until it engages.

4.

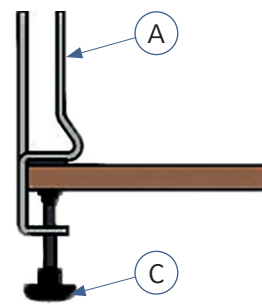

Slide the soni FIX CLAMP [A] onto the edge of the desk/table and tighten the pressure screw [C].

TABLE CLAMP

PLEASE SEE OUR PROCESSING AND STORAGE INSTRUCTIONS

Details and values given in this leaflet are average values and have been compiled with care. They are not binding, however, and Cellofoam International GmbH & Co. KG disclaims any liability for any damages and detriments, also in connection with any third party's rights. The information given does not release the buyers from making the necessary experiments and tests themselves. Subject to technical changes. For updates please go to our website.

Cellofoam International GmbH & Co. KG
Business unit soniflex
P: +49 7351 340 28 61
sales@soniflex.de / www.soniflex.de

VERSION 01/21

Distribution partner for Switzerland:
soniflex Switzerland
P: +41 44 377 60 50
einkauf@soniflex.ch / www.soniflex.ch